


# PM-002 Thermostat Wiring

Use a conventional two-wire bi-metallic thermostat or equivalent.  
Cut off one end of a 6-wire phone cable.  
Plug the other end into Port 6 of the PM-002.  
Isolate and strip wires 4 & 5 from the cut end of the cable (as numbered at the PM-002).  
Attach these two wires to the thermostat.  
Install the thermostat in an out-of-the-way location.  
Enable the Thermostat feature at the VMS or other SilverLeaf panel.  
When the thermostat makes contact between the two wires, the generator will start.

You can test by directly connecting the two wires.

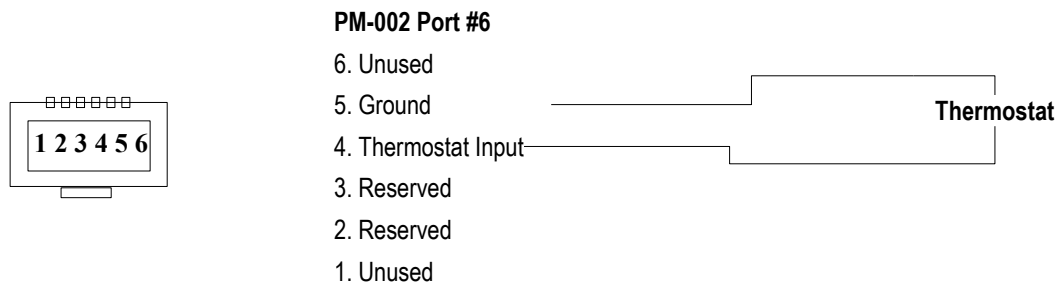

\*All connectors are wire side view